 


TOOL 5000 & 5000 HT ACCESSORIES



 
Round nozzle for LE 5000
107.245: Round nozzle \varnothing 40 mm, push-fit



Flange connector for LE 5000
107.246: Flange connector, push-fit



Extension nozzle for LE 5000
107.247: Extension nozzle 200 x 40 mm, push-fit



Tubular nozzle for LE 5000
107.253: Tubular nozzle, length 700 mm, Length of air outlet slot 550 mm, push-fit



Wide slot nozzle for LE 5000
107.259: Wide slot nozzle 150 x 12, push-fit



 
Wide slot nozzle for LE 5000
107.260: Wide slot nozzle 85 x 15 mm, push-fit




Wide slot nozzle for LE 5000
107.262: Wide slot nozzle 300 x 4 mm, push-fit



Angled nozzle for LE 5000
107.265: Angled nozzle, shank length 120 x 112 mm, push-fit



 Hand operated air flow adjuster for LE 5000
107.295: Hand operated airflow adjuster and on/off switch. Air outlets and adaptors are standardized to allow all possible combinations



Air flow off/on switch for LE 5000
107.299: Air flow off/on switch The air flow is interrupted on command (pneumatic 5 bar) to the heaters Size 214 x 88 x 133



Sieve reflector for LE 5000
107.335: Sieve reflector \varnothing 150mm, push-fit



Turbo nozzle air outlet for LE 5000
110.582: Turbo nozzle outlet \varnothing 36 mm, push-fit